 


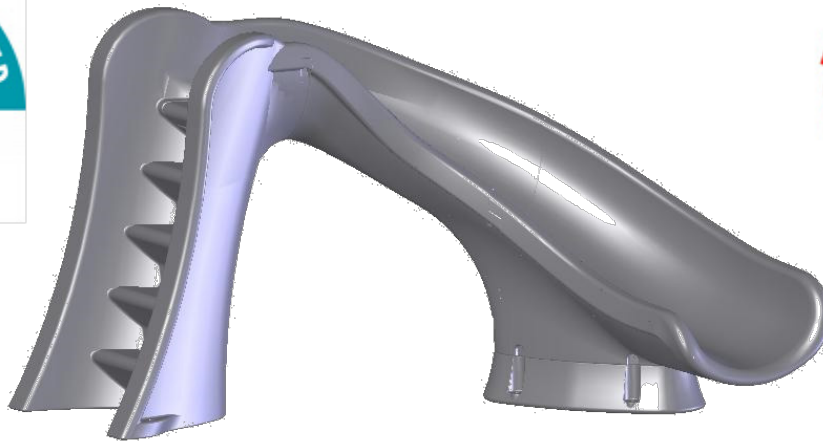

## CYCLONE

### SLIDE OWNER'S MANUAL



### WARNING

S.R. SMITH CYCLONE SLIDES ARE MANUFACTURED FOR INSTALLATION AND USE ON RESIDENTIAL INGROUND SWIMMING POOLS ONLY. THE CYCLONE IS NEVER TO BE INSTALLED AND USED ON ABOVEGROUND POOLS, ONGROUND POOLS, HOUSEBOATS, BOAT DOCKS, FLOATING DOCKS OR PLATFORMS OR OTHER BODIES OF WATER SUCH AS LAKES, PONDS, RIVERS, ETC.

#### SRS AUSTRALIA, PTY LTD

12 Enterprise St  
Richlands QLD 4077  
Australia

Phone 07 3812 2283 • Fax 07 3812 1187  
[www.srsmith.com/au](http://www.srsmith.com/au)

#### S.R. SMITH, LLC

CORPORATE HEADQUARTERS  
P.O. Box 400 • 1017 S.W. Berg Parkway  
Canby, Oregon 97013  
USA

Phone (503) 266 2231 • Fax (503) 266 4334  
[www.srsmith.com](http://www.srsmith.com)

## TABLE OF CONTENTS

|   |   |
|---|---|
| SLIDE WARNING AND SAFETY SUMMARY .....                      | 3 |
| INTENDED USE INSTRUCTIONS .....                             | 4 |
| PROPER SLIDE POSITION .....                                 | 4 |
| INSTALLED CYCLONE STRUCTURAL & INSTALLATION CHECKLIST ..... | 5 |
| DAILY/WEEKLY MAINTENANCE OF THE CYCLONE.....                | 5 |
| CLEANING INSTRUCTIONS.....                                  | 5 |
| APPLICABLE STANDARDS AND CODES .....                        | 6 |
| ASSEMBLY AND INSTALLATION .....                             | 6 |
| DRAWINGS.....   | 6 |
| SUBSEQUENT OWNERS .....                                     | 6 |
| MANUFACTURER'S PLACEMENT INSTRUCTIONS .....                 | 7 |

---

SLIDE ASSEMBLY AND INSTALLATION VIDEOS AVAILABLE AT  
[www.youtube.com/srsmithllc](http://www.youtube.com/srsmithllc)

REGISTER YOUR S.R. SMITH PRODUCT AT  
[www.srsmith.com/en/customer-service/product-registration](http://www.srsmith.com/en/customer-service/product-registration)

---



Visit [srsmith.com](http://srsmith.com) for information on the complete line of S.R. Smith pool products.

## SLIDE WARNING AND SAFETY SUMMARY



**DANGER – FAILURE TO FOLLOW THESE WARNINGS, INSTRUCTIONS, AND THE OWNER’S MANUAL MAY RESULT IN SERIOUS INJURY OR DEATH**



**HEAD FIRST SLIDES ARE STRICTLY PROHIBITED**

**TO REDUCE THE POSSIBILITY OF INJURY, IT IS NECESSARY THAT THE USER KNOW THAT THE CHIEF DANGER OF HEAD FIRST SLIDING IS SERIOUS SPINAL INJURY. INJURIES TO THE SPINE MAY RESULT IN TEMPORARY OR PERMANENT PARALYSIS OR EVEN DEATH. RESEARCH STUDIES HAVE SHOWN THAT YOU CANNOT RELY ON THE WATER TO SLOW YOU DOWN SUFFICIENTLY TO AVOID INJURY.**

## **WARNING**

- **READ AND FOLLOW ALL SAFETY RULES LISTED BELOW**
- **MAKE SURE HAT EVERYONE WHO USES THE CYCLONE KNOWS AND FOLLOWS ALL RULES.**
- **CHILDREN MUST BE SUPERVISED BY AN ADULT AT ALL TIMES WHEN USING THE SLIDE.**


### **INTENDED USE INSTRUCTIONS**

S.R. Smith Cyclone slides are designed and manufactured for installation and use on inground swimming pools only. S.R. Smith Cyclone slides are NEVER to be installed and used on aboveground pools, onground pools, houseboats, boat docks, floating docks or platforms, or other bodies of water such as lakes, ponds, rivers, etc

1. Slide feet first only as shown in FIGURE A. Do not slide head first
2. Only one person allowed on the slide at a time with a maximum user weight of 250 lbs. (113 kg).
3. Adult supervision required at all times when children are using the slide.
4. Hold onto handrails at all times when using the ladder.
5. No roughhousing or horseplay on slide.
6. Do not jump or dive from any part of the slide.
7. Familiarize yourself with the shape of the pool bottom and the water depth before you slide. Slide feet first only.
8. Do not slide until all submerged obstacles, surface objects or other swimmers are clear of the slider's pathway.
9. Do not use the slide while under the influence of alcohol or drugs.
10. Don't slide alone; use the buddy system.
11. Take your time in preparing to slide. Move forward slowly and get yourself positioned properly before starting the slide.
12. Only persons healthy enough for water activities should use the slide. Persons with medical conditions, including pregnancy, should consult their doctor before using the slide. Persons with physical disabilities should use caution and may require assistance.
13. Do not use the slide if any part of it becomes damaged, weakened, or broken. Have the slide inspected and, if necessary, repaired by a pool professional, who is familiar with water slides before using the slide. See installed slides' structural & installation checklist.

### **PROPER SLIDE POSITION**

Slide users must use the sitting slide position, facing forward, feet first as shown in FIGURE A

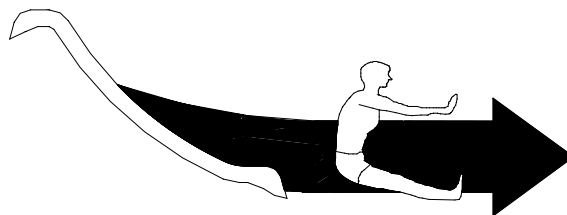 

**FIGURE A**

## **INSTALLED CYCLONE STRUCTURAL & INSTALLATION CHECKLIST**

After installation and prior to the first use of the Cyclone and periodically (see DAILY/WEEKLY MAINTENANCE) thereafter the owner must:

1. Inspect the runway for visible cracks or tears.
2. Inspect the ladder for sharp edges, protrusions, cracks or tears.
3. Inspect ladder and pedestal mounting areas for loose or corroded fasteners.
4. Measure the following dimensions and compare with the manufacturer's placement instructions on pages 7 and 8.
  - Measure the depth of water in front of the slide exit. (3-6") min. depth at a distance of (4-6") from exit end of slide.
  - Measure the height of the slide runway exit above the water. (20" max.)
  - Measure the distance between the slide centerline and the edge of other pool equipment.
5. Observe the position of the exit of the slide as shown in FIGURE B, and FIGURE C on pages 7 and 8.
6. Read, understand and enforce all safety and use instructions on the slide.

## **DAILY/WEEKLY MAINTENANCE OF THE CYCLONE**

1. When hosing down the deck, hose your Cyclone to wash away any dust, dirt or other debris, which may have accumulated.
2. Be sure that all connections are secure. Tighten hardware if necessary.
3. All polyethylene parts require little maintenance. Hose and wipe to clean. While cleaning slide, check and see that all nuts and bolts are tight and secure.
4. Inspect the runway for visible cracks or tears, sharp edges and protrusions.
5. Inspect all attachment points for loose or corroded fasteners.
6. Inspect all ladder tread or step-attachment points for evidence of shear, bending yield, or fatigue in the ladder steps, rails, or attachments means. Yield is evidenced by crystallization or fine cracking of the ladder tread and/or surface.
7. Inspect the ladder handrails for rigidity and attachment.

## **CLEANING INSTRUCTIONS**

Use nonabrasive soap and water when possible. In addition, you may safely use the products listed below. Always try a test spot before applying to a large area.

Windex® With Ammonia  
Soft Scrub®  
Glass Plus®

Formula 409®  
Scrubfree  
Topjob®

Fantastik®  
Tackle®  
Tilex®

Always read the label instructions on any cleaner carefully before applying it to a polyethylene surface.

---

### **AVOID HARSH CHEMICALS AND DISINFECTANTS. DO NOT USE:**

Dow with Scrubbing Bubbles®  
Windex® With Vinegar

Lysol® Disinfectant  
White Cap®

Ajax® Cleanser  
Ajax® Liquid

---

## **APPLICABLE STANDARDS AND CODES**

All S.R. Smith Cyclone slides are manufactured in accordance with Consumer Products Safety Commission STANDARD FOR SWIMMING POOL SLIDES, 16 CFR Ch. 11 Part 1207 (latest edition). The installation of this slide must comply with all applicable governmental and building codes.

## **ASSEMBLY AND INSTALLATION**

All S.R. Smith slides are inspected prior to shipment from the factory. Proper assembly and installation is mandatory. Improper assembly and installation voids S.R. Smith's warranty and may affect the safety of the user. It is the installer's responsibility to ensure that the structural integrity of the concrete pad prior to installation of the slide.

## **DRAWINGS**

All drawings in this Slide Owner's Manual (FIGURE A through FIGURE E) are for illustration purposes only and are NOT TO SCALE.


## **SUBSEQUENT OWNERS**

The Owner's Manual must remain with the owner of the slide. If the owner changes, the Owner's Manual shall be brought to the attention of the new owner.

## MANUFACTURER'S PLACEMENT INSTRUCTIONS


**PROPER ASSEMBLY, INSTALLATION, USE, AND SUPERVISION ARE ESSENTIAL FOR PROPER OPERATION AND TO REDUCE THE RISK OF SERIOUS INJURY.**

1. The critical dimensions for placement of the Cyclone are as shown in FIGURE F and FIGURE G.
  - A. The slide exit runway surface shall not exceed twenty inches (508 mm) above the water surface as shown in FIGURE F.
  - B. The slide shall be positioned so that all water flowing off the runway exit drops into the pool. The recommended overhang is 102 mm.
  - C. The minimum depth of water below the exit lip of the slide shall be three feet (914 mm) and increase to three feet six inches (1067 mm) at Pt. A, which is a distance of four feet six inches (1372 mm) from the exit lip of the slide as shown in FIGURE F.
  - D. A minimum depth of three feet six inches (1067 mm) shall be maintained at a distance of nine feet (2743 mm) along the extended centerline of the slide from Pt. A. as shown in FIGURE F.

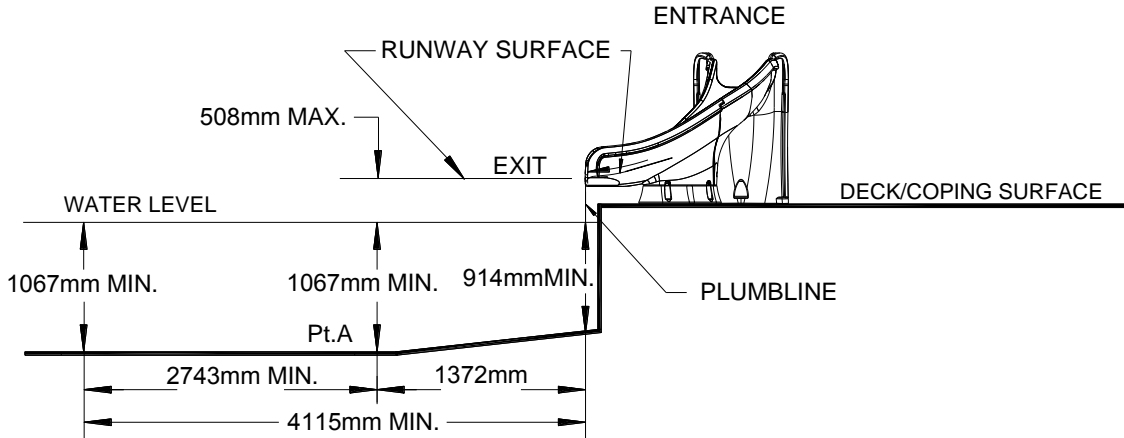 

**FIGURE F**

2. A minimum clearance area in front of the slide shall be maintained at all times as follows:
  - A. The minimum clearance distance on either side of the extended centerline of the slide runway shall not be less than three feet six inches (1067mm) at a point no less than two feet six inches (762mm) from the exit lip of the slide and extending a distance of thirteen feet six inches (4115mm) in front of the slide as shown in FIGURE G.
  - B. The minimum clearance area in front of a properly installed diving board on an inground swimming pool is a minimum distance of three feet six inches (1067mm) on either side of the board's centerline as shown in FIGURE H. Pt. C extends a minimum distance of "C" from the tip end of the board as shown in FIGURE H. The width distance "W" on either side of Pt. C is given in TABLE 1 and shown in FIGURE H.

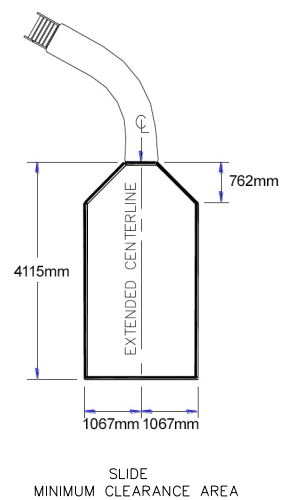 


**FIGURE G**

**TABLE 1**

| Board Minimum Clearance Area |                   |                  |
|------------------------------|-------------------|------------------|
| Pool Type                    | "C" Dimension     | "W" Dimension    |
| I                            | 14' -6" (4.420 M) | 5' -0" (1.524 M) |
| II                           | 14' -6" (4.420 M) | 6' -0" (1.829 M) |
| III                          | 16' -6" (5.029 M) | 6' -0" (1.829 M) |
| IV                           | 18' -6" (5.639 M) | 7' -6" (2.286 M) |
| V                            | 21' -0" (6.401 M) | 7' -6" (2.286 M) |

See Article 5 contained in ANSI/APSP/ICC-5 2011 STANDARD FOR RESIDENTIAL INGROUND SWIMMING POOLS and refer to FIGURE 3 and Table 1 for Minimum Water Envelope Dimensions AB, BC and Width at Point C.

 
"C" DIMENSION FOR BOARD = AB + BC  
 "W" DIMENSION FOR BOARD = WIDTH AT PT.C

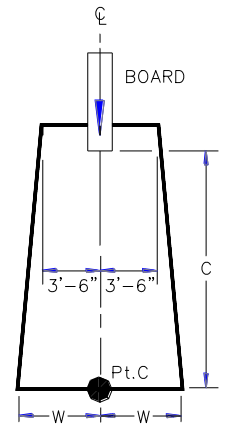

BOARD  
MINIMUM CLEARANCE AREA

**FIGURE H**

- C. The minimum clearance area of a slide of diving board shall not intersect any coping or rope and float line as shown in FIGURE I. The minimum clearance area of a slide or diving board may intersect each other provided that they are not used simultaneously.

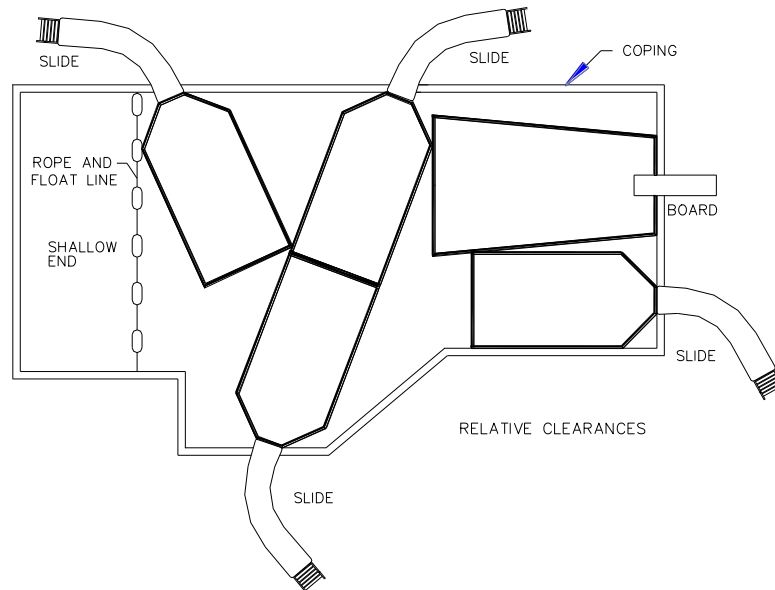 

**FIGURE I**